
Neste 78cm Cutout Template

Recessed Base Method, 5 mm Negative Reveal (recommended)

zuhnë

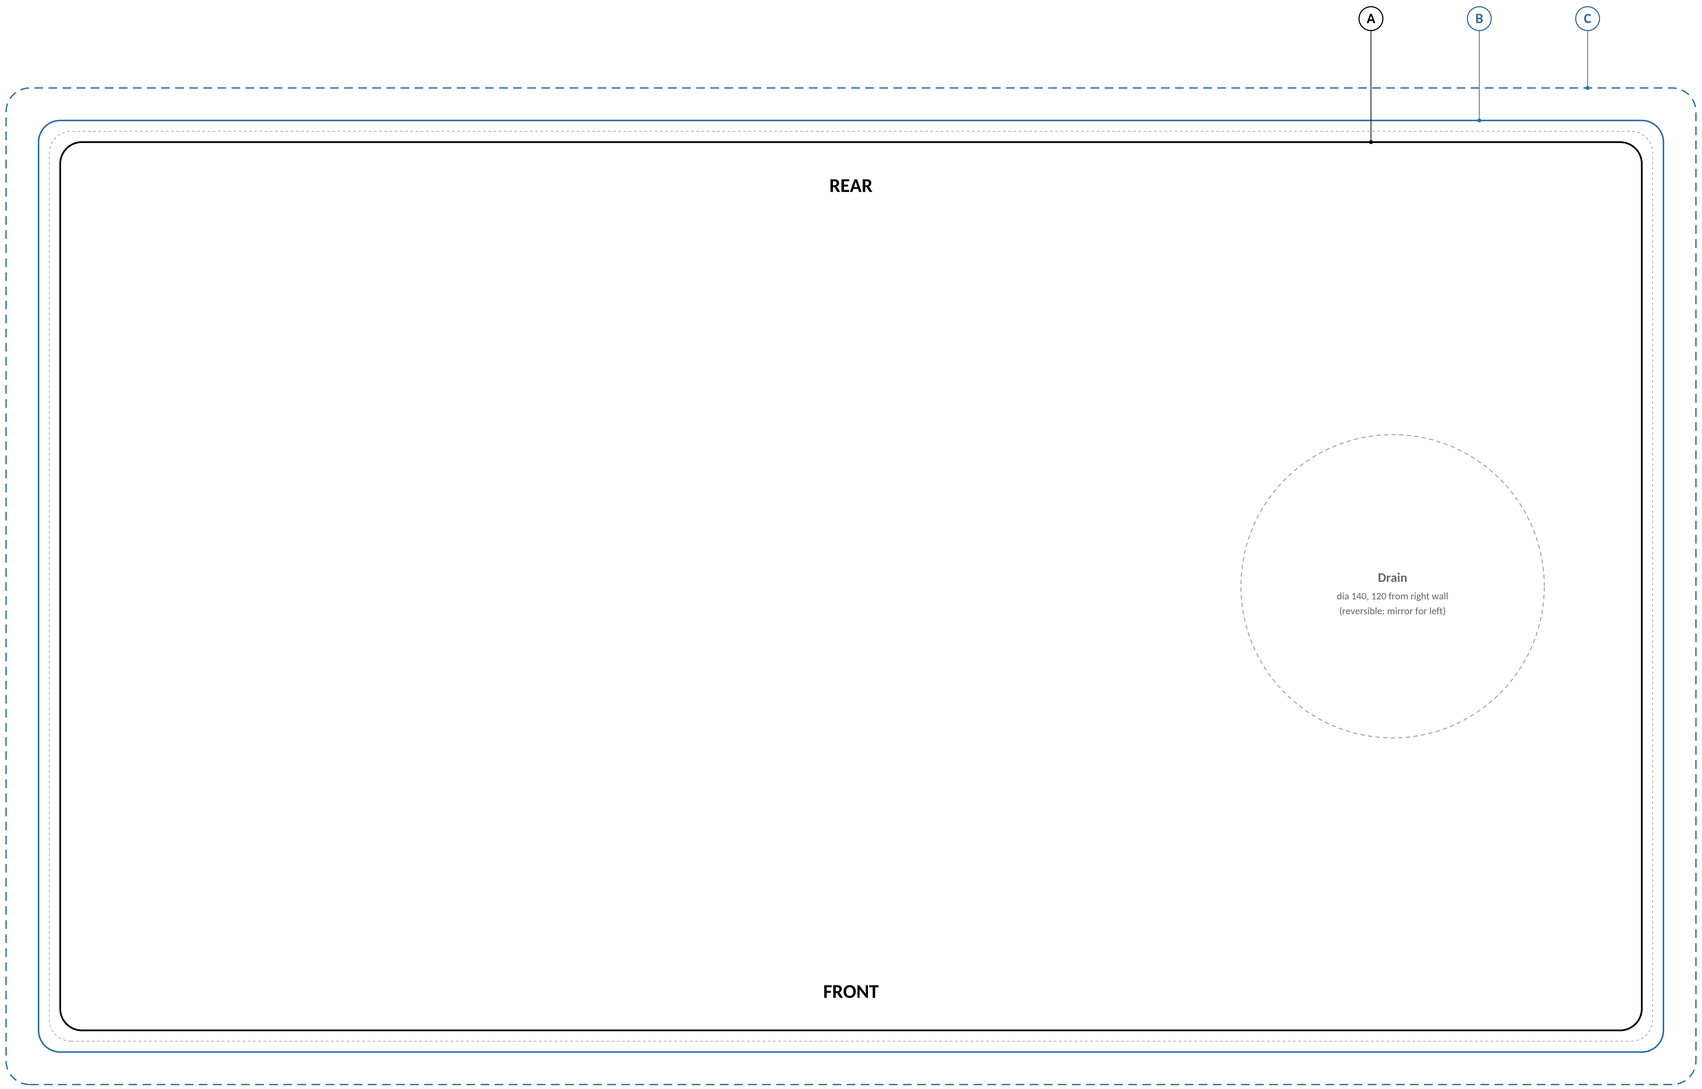

Scale Check:
this bar must measure 100 mm

Print at 100%. Do not scale to fit.
View from above. Front is at the bottom.

A **Undermount Cutout Opening**
730 x 410 mm (5 mm negative reveal)
Undermount: cut in the countertop

B **Topmount / Flush Mount (Inset) Opening**
750 x 430 mm (basin + 5 mm each side)
Topmount and flush mount: cut in the countertop
Undermount: cut in the base

C **Rim Recess (Flush Mount)**
780 x 460 mm, 1.5 to 2 mm deep
Matches the sink exterior
Flush mount: cut in the countertop
Undermount: cut in the base

Undermount

Countertop surface: cut line A.
Base: cut lines B and C.
(Base = plywood, cement or solid WPC
support under the countertop surface.)

Topmount

Countertop: cut line B.
The rim rests on the countertop.

Flush Mount (Inset)

Countertop: cut line B,
then cut the recess on line C.

Important

Check this matches your sink model and size.
Sinks have a size tolerance. Aim for the size shown.
Dry-fit the sink before final cutting.
This template applies if it differs from the guide.