


Oslo V6 80cm Cutout Template

Recessed Wooden Base Method, Zero Reveal

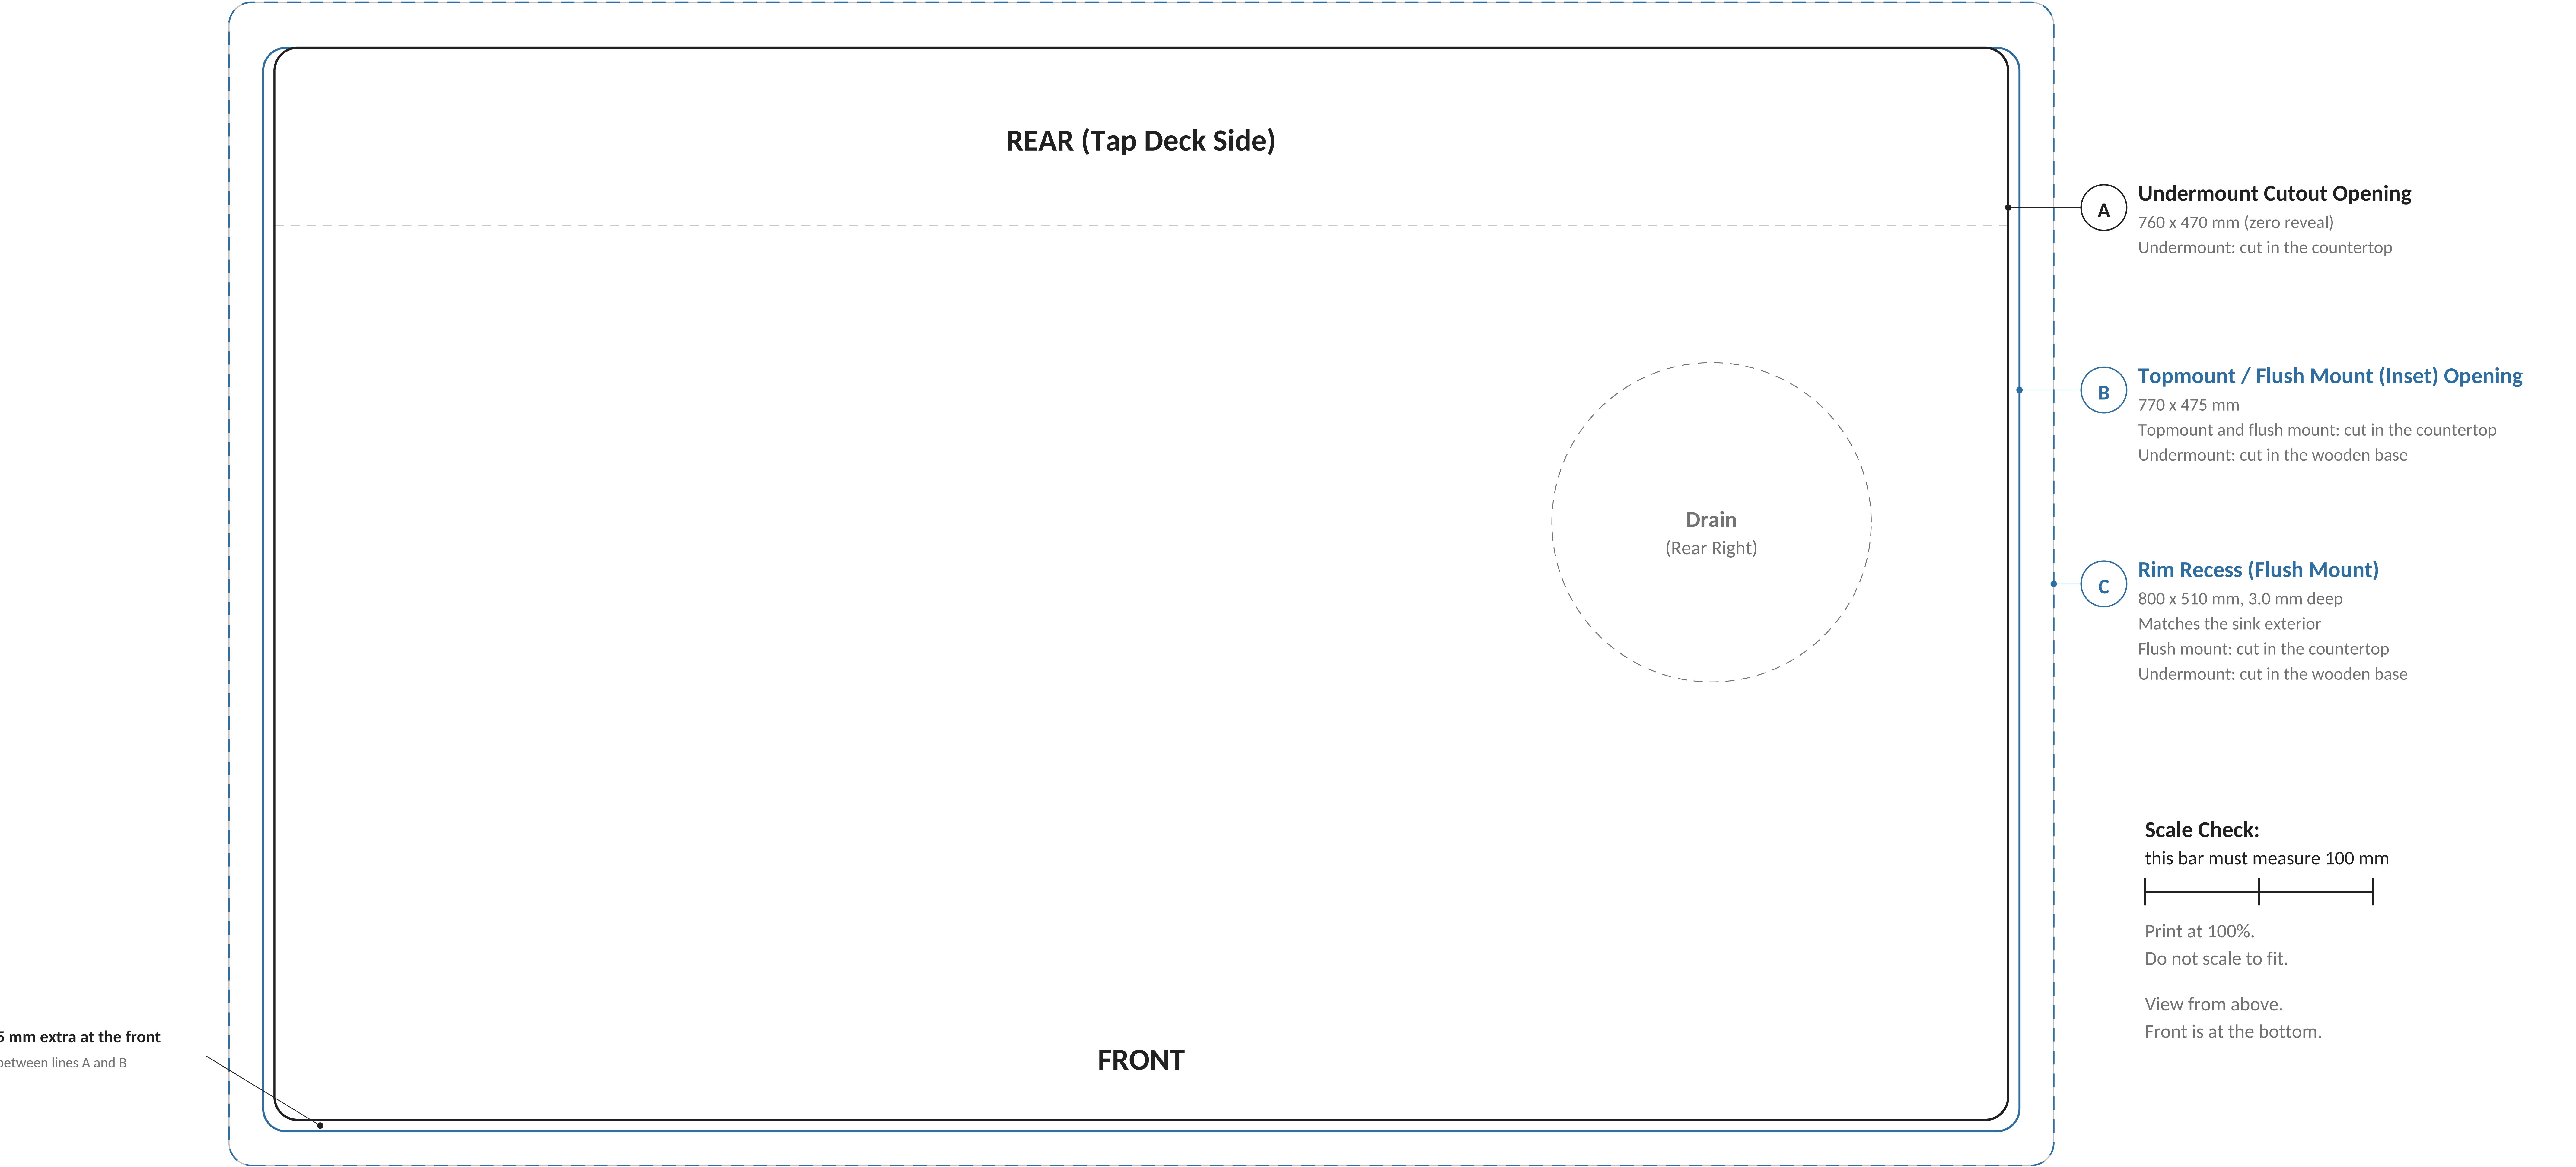

Undermount

Countertop surface: cut line A.
Wooden base: cut lines B and C.
(Wooden base = the plywood board
under the countertop surface.)

Topmount

Countertop: cut line B.
The rim rests on the countertop.

Flush Mount (Inset)

Countertop: cut line B,
then cut the recess on line C.

Important

Check this matches your sink model and size.
Sinks have a size tolerance. Aim for the size shown
plus 1 mm on each side. Never smaller.
Dry-fit the sink before final cutting.
Keep the 5 mm front offset on line B.
This template applies if it differs from the guide.